



Dell Latitude X300 Keyboard Replacement

This guide shows you how to properly remove the keyboard from the laptop.

Written By: Jacob Egorov






TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Keyboard

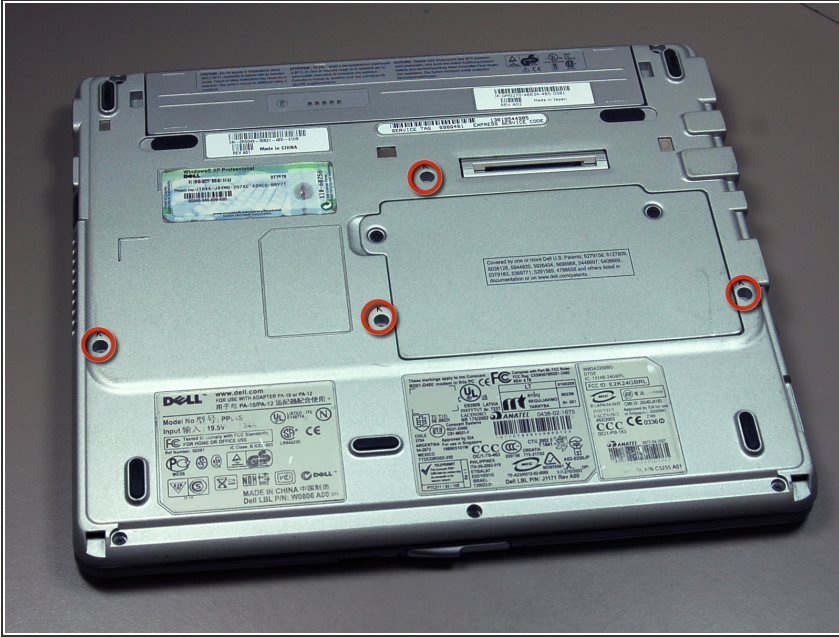


- Remove the four 4-mm screws on the bottom of the laptop using a #0 screw driver.

Step 2



- Carefully turn the laptop over and open the screen all the way.
- Locate the slot to remove the keyboard in the lower left hand corner.
- Using a flat screw driver as a lever, insert it into the slot and gently pry up.


Step 3

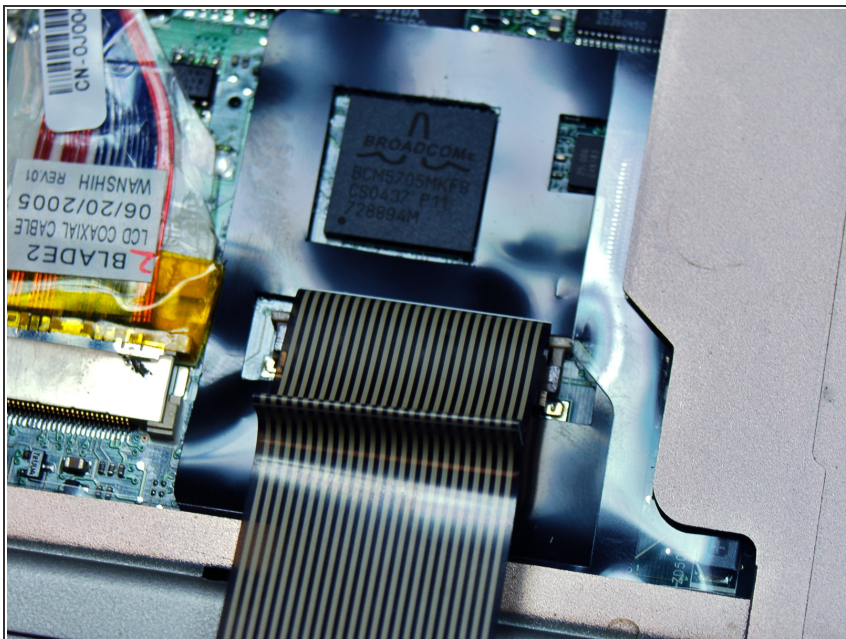

- After the keyboard pops up, pull it away from the screen just enough to release the tabs.


⚠ Don't pull the keyboard out forcefully as there is still a ribbon attached to the laptop.

Step 4

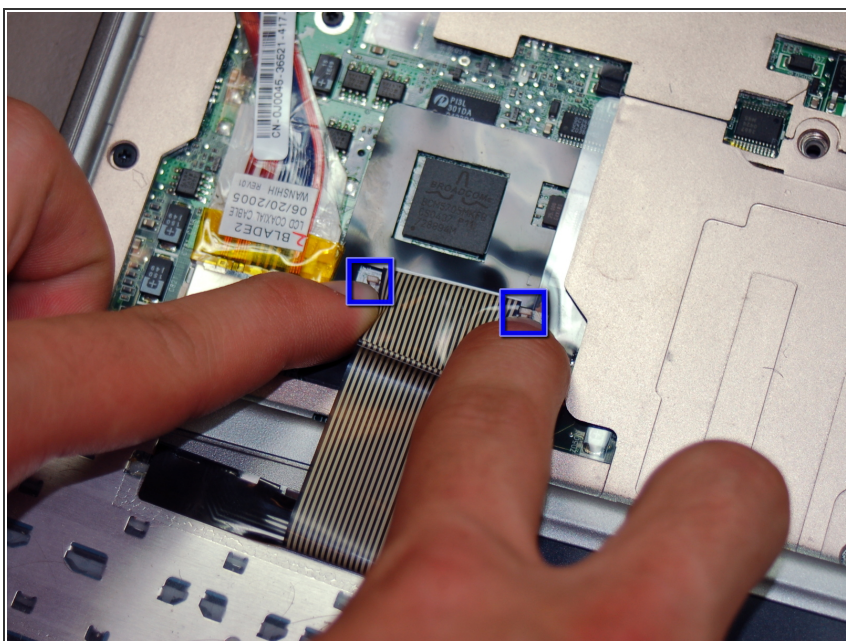

- Unlock the ZIF connector on the computer by pushing the two outside tabs toward the screen.

Step 5

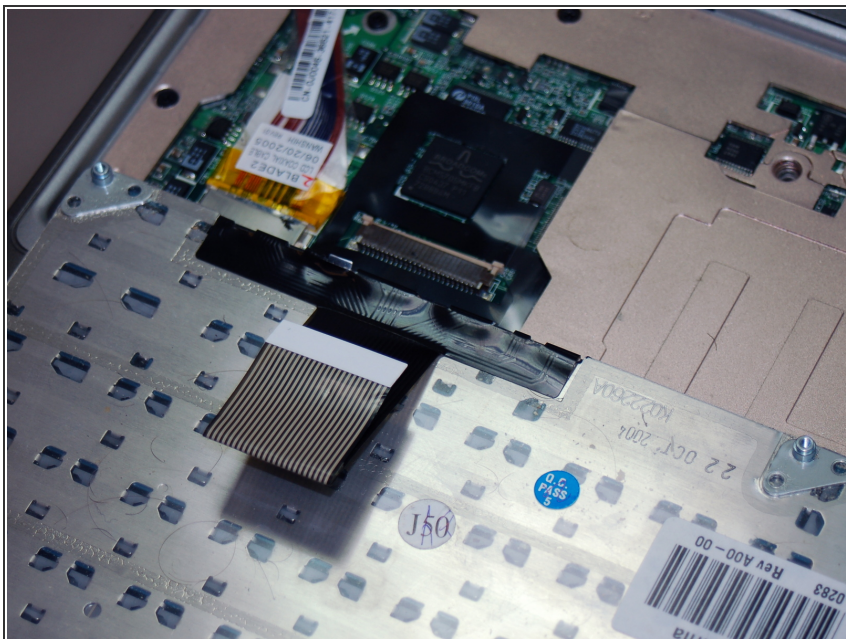

- Remove the flexible ribbon from ZIF connector.

⚠ Do not pull on the ribbon to remove it from the ZIF connector.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-25 08:22:48 AM.